



Completely read all the instructions before installation
Improper installation will void warranty!

Step 1



Tools needed:
Phillips Screw Driver

Step 2



Remove the two phillips screws located directly behind the tail light housing

Step 3



Remove the tailight by disconnecting the three light bulb power sources

Step 4



Remove the tail lights

Step 5



Remove the Anzo tail lights out of its box

Step 6



Install the Anzo tail lights by reversing the steps 2 to 4

Step 7



Test all functions before operating the vehicle

product categories have warranty policies which differ from this standard, please contact your representative for detailed category information. Damage due to improper installation or road hazards is not covered. Seller and manufacturers' only obligations shall be to replace the product proven to be defective. Neither seller nor manufacturer shall be liable for any injury, loss or damage, direct or consequential, arising out of the use of or the inability to use the product. Before using, user shall determine the suitability of the product for its intended use, and user assumes all risk and liability whatsoever in connection therewith.

© 2008 AnzoUSA™. All rights reserved.

9

9