


Instruction for TCL101 / TCL151 / TCL25

SKYJACKER®


THE BEAR OF SUSPENSIONS

1. On Wrangler TJ models remove the 4 screws that mount the transfer case pivot assembly from the body of the vehicle (it will be necessary to roll floor mat back to gain access to the bolts under the driver's side transmission tunnel).
2. On Wrangler TJ and YJ models Place a jack under the transfer case crossmember. Remove the 3 bolts on each side of the transfer case skid plate and lower down enough to install new square tube spacers between the skid plate and frame. Now attach using the 1/2" grade 8 bolts, with a washer under the head of the bolt (also apply a few drops of loctite on the bolt threads prior to installing). Tighten the bolts to 75 - 80 ft. lbs. (Picture #1) Please note left and right pieces are different.
3. On Wrangler TJ models install the new transfer case linkage pivot drop bracket to stock pivot pivot bracket using stock screws. Using the two 1/4 x 1" bolts with a flat washer and self locking nut, bolt the ball swivel bracket (arrow in picture #2) to new drop bracket (bracket now has two sets of holes: bottom holes for 4" lift as shown or next to bottom for 2 1/2" lift). Placing pivot bracket back in location, start end of rod through ball swivel. Now bolt bracket into location with original hardware (Picture #3).

NOTE: Wrangler YJ owners, perform step #2 only.

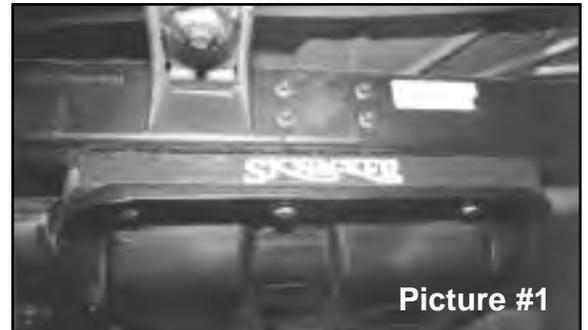

Picture #1

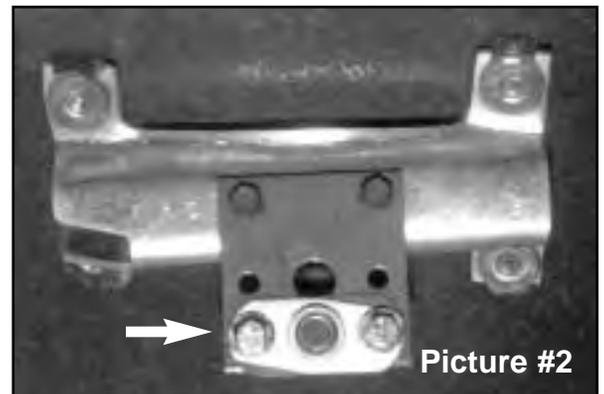

Picture #2



Picture #3