

INSTALLATION INSTRUCTIONS

PART#4351(B-C-PS)

04 -13 Nissan Titan Crew Cab - Short Bed ONLY

Parts List :

QTY	(1) Hardware kit including :	(2) 3/8" Hex nut
(1) Sidebar set (Left & Right)	(4) 1/2 x 2" Hex head bolt	
(2) Front mounting bracket (left & right)	(2) 3/8 x 1 1/2" Carriage bolt	
(2) Rear mounting bracket (left & right)	(4) 1/2" special bolt	
(2) Auxiliary mounting bracket (left & right)	(8) 1/2" Flat washer	
	(8) 1/2" Lock washer	
	(4) 1/2" Hex nut	
	(2) 3/8" Flat washer	
	(2) 3/8" Lock washer	

Tools Required :

3/4" Socket Ratchet
3/4" Wrench 14mm Socket


Instructions :

Approximated installation time: 30 min.


1. Read and understand instructions completely before beginning installation.
2. Sidebar set consist of a driver and passenger side. The rear leg is the 90° bent leg. Be sure to determinate the correct side before installation.
3. Locate front body mount and remove existing bolts to secure front mounting bracket. Picture 1.
4. To install auxiliary mounting bracket, locate existing hole in the frame then pass thru a 3/8 x 1 1/2" carriage bolt and secure auxiliary mounting bracket with 3/8" flat & lock washers and hex nut. Picture 2.
5. To install rear mounting bracket, locate existing holes in the frame, they are close to the rear body mount, then introduce the 1/2" special bolt by the holes and secure rear mounting bracket using 1/2" flat & lock washers and hex nuts. Leave loose. Picture 3.
6. Place the sidebar up to the mounting brackets and bolt to the front mounting bracket and auxiliary mounting bracket using a 1/2 x 2" hex head bolt, flat and lock washer. Bolt to the rear mounting bracket using 1/2 x 2" hex head bolt with corresponding washers. Leave loose.
7. Make any final adjustments to the alignment of the sidebar and tighten all bolts. Repeat for the opposite side.
8. You may need to periodically re-tighten the bolts.

Assembly Diagram :

Picture 1

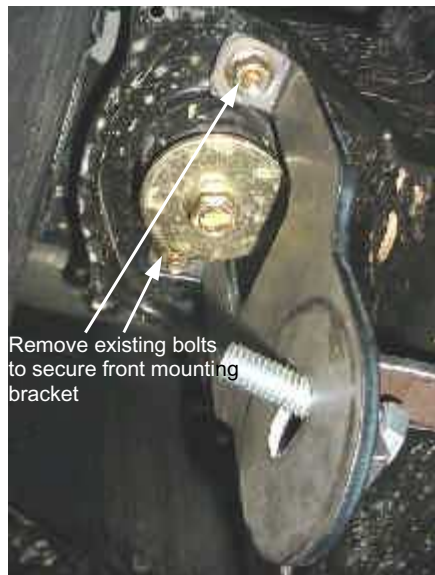


Picture 2

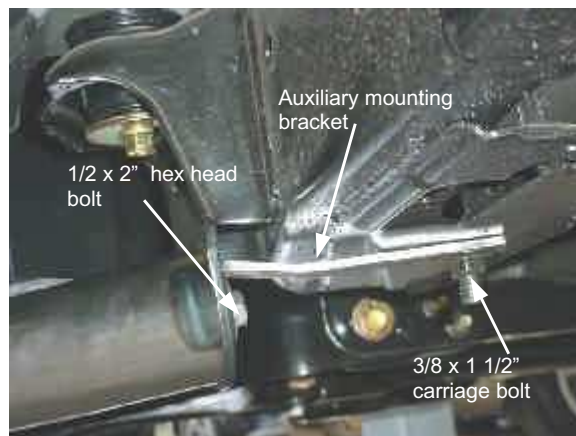

INSTALLATION INSTRUCTIONS

PART#4351(B-C-PS)

Picture 3

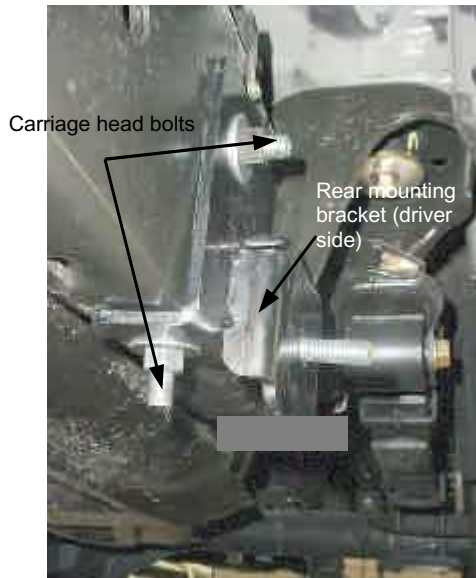

Cleaning and care instructions :

Protect the finish with a non-abrasive automotive wax, (e.g. Pure Carnauba) on a regular basis. The use of any soap, polish, or wax that contains an abrasive is detrimental to the finish, as the compounds scratch the finish and cause corrosion.

Revised 29/10/04

G:\Usuarios\Diseno\Nuevos Productos\Instructivos\37's\

Firmado digitalmente por E.

Arana

04/07/2009 08:58:25

ing

2 of 2

Fecha Máx. Emp: 29/Jul/2009

FODI7.003.E