


Installation Instructions BR10 Universal Light Bar Part # 26173T

Part List

Item	Qty.	Part No.	Description	Torque
1	1	26173T0AA	*Light Bar	
2	1	26173T0BA	*Light Bar Mesh Cover	
3	8		*1/4" x 1/2" Button Head Bolt	4 ft.lbs
4	8		*1/4" Nylon Lock Nut	
5	4		3/8" x 1 1/4" Hex Bolt	30 ft.lbs
6	8		3/8" Flat Washer	
7	4		3/8" Lock washer	
8	4		3/8" Hex Nut	
*Pre Assembled				

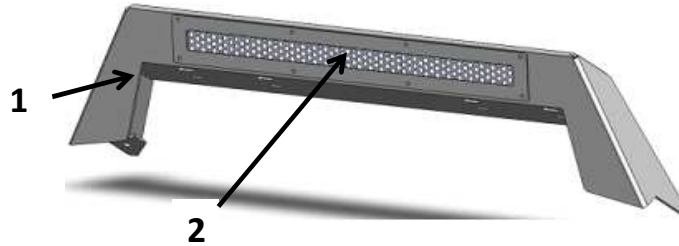

Tool required:
7/16" & 9/16" Socket
7/16" & 9/16" Wrench
Ratchet.
5/32" Hex Key

Approximate installation time: 20 min.

Read the installation instruction completely and verify that all of the parts listed are accounted for. If you have defective, missing or damaged parts or need assistance, please contact Go Rhino Products for fast, friendly customer at: 1-888-427-4466 or email: warranty@gorhino.com


Step-1 If Installed, remove the (6) bolts and mesh cover from the Bumper Shell.

Step-2 Locate the Light Bar attachment holes in the Bumper Shell and secure the Light Bar to the Bumper Shell using (4) 3/8" x 1 1/4" hex bolts, (8) 3/8" flat washers, (4) 3/8" lock washers, and (4) 3/8" hex nuts.

Step-3 Align the Light Bar and tighten all nuts and bolts.

If Installed, remove the (6) bolts and mesh cover from the Bumper Shell.

Locate the Light Bar attachment holes in the Bumper Shell.

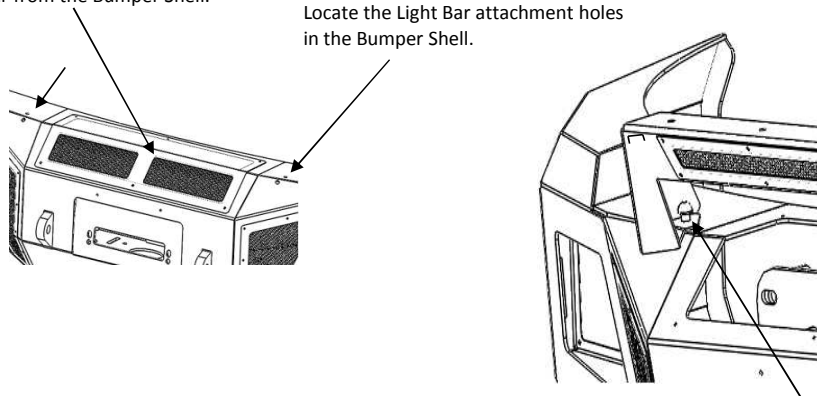

Secure the Light Bar to the Bumper Shell using (4) 3/8" x 1 1/4" hex bolts, (8) 3/8" flat washers, (4) 3/8" lock washers, and (4) 3/8" hex nuts.