



Description: Crystal Headlight
Part Number: 121052 - 121297
Application: 98-02 Honda Accord



Tools needed: Flat head screw driver, 8mm Socket, 10mm socket



Remove the two push pins located on the bumper by the inner headlight housing



Remove the 10mm screw holding the front bumper on both sides



Remove the screw from underneath the vehicle. There will be two at each end.



Remove the 5 push pins from under the vehicle with the flat head screw driver



Push the corner of the bumper down then pull away from the car. Do the same with the other side.




Once both sides are loosened from the frame remove the front bumper.



Use the 10 mm socket to remove the one screw from the top of the light.



Remove the one screw on the side of the headlight, this will be holding in the support frame.

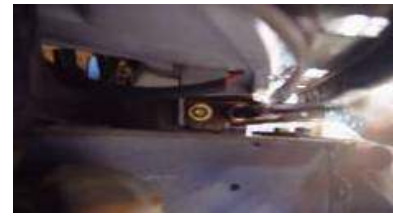

Remove the two 10mm bolts from under the headlight support frame.



Remove the headlight from the frame.



Twist off the turn signals in the headlight.



Twist off the headlight bulbs.



Unclip the headlight wire harness from the bulbs.



The headlight will now come right out.



Install your new head light by reversing the steps.



Test all functions of the light before operating on the highway.

AnzoUSA™ products are covered, by a limited one (1) year warranty, to be free of manufacturer's defects. However, certain AnzoUSA™ product categories have warranty policies which differ from this standard, please contact your representative for detailed category information. Damage due to improper installation or road hazards is not covered. Seller and manufacturers' only obligations shall be to replace the product proven to be defective. Neither seller nor manufacturer shall be liable for any injury, loss or damage, direct or consequential, arising out of the use of or the inability to use the product. Before using, user shall determine the suitability of the product for its intended use, and user assumes all risk and liability whatsoever in connection therewith.