




INSTALLATION INSTRUCTIONS



DOMINATOR III SERIES SIDE STEPS PART NUMBER D36088 (B-PS)
 07-11 CHEVROLET SILVERADO / GMC SIERRA 1500 CREW CAB P/U 4DR 2/4WD
Do not attempt to install this product on any vehicle other than the one it is designed for and listed above!

PARTS LIST		PARTS LIST	
QTY	PART DESCRIPTION	QTY	PART DESCRIPTION
4	5/16" U-NUT	16	3/8" HEX NUT
4	5/16" X 1" HEX BOLT	16	3/8" FLAT WASHER
4	8M X 25M HEX BOLT	3	C07D DRIVER BRACKET
8	5/16" LOCK WASHER	3	C07P PASSENGER BRACKET
8	5/16" FLAT WASHER	1	388FD DRIVER SIDE STEP FRONT SECTION
16	3/8" x 1 1/4" HEX BOLT	1	388RD DRIVER SIDE STEP REAR SECTION
16	3/8" LOCK WASHER	1	388FP PASSENGER SIDE STEP FRONT SECTION
		1	388RP PASSENGER SIDE STEP REAR SECTION

Read the instructions completely before you begin the installation.

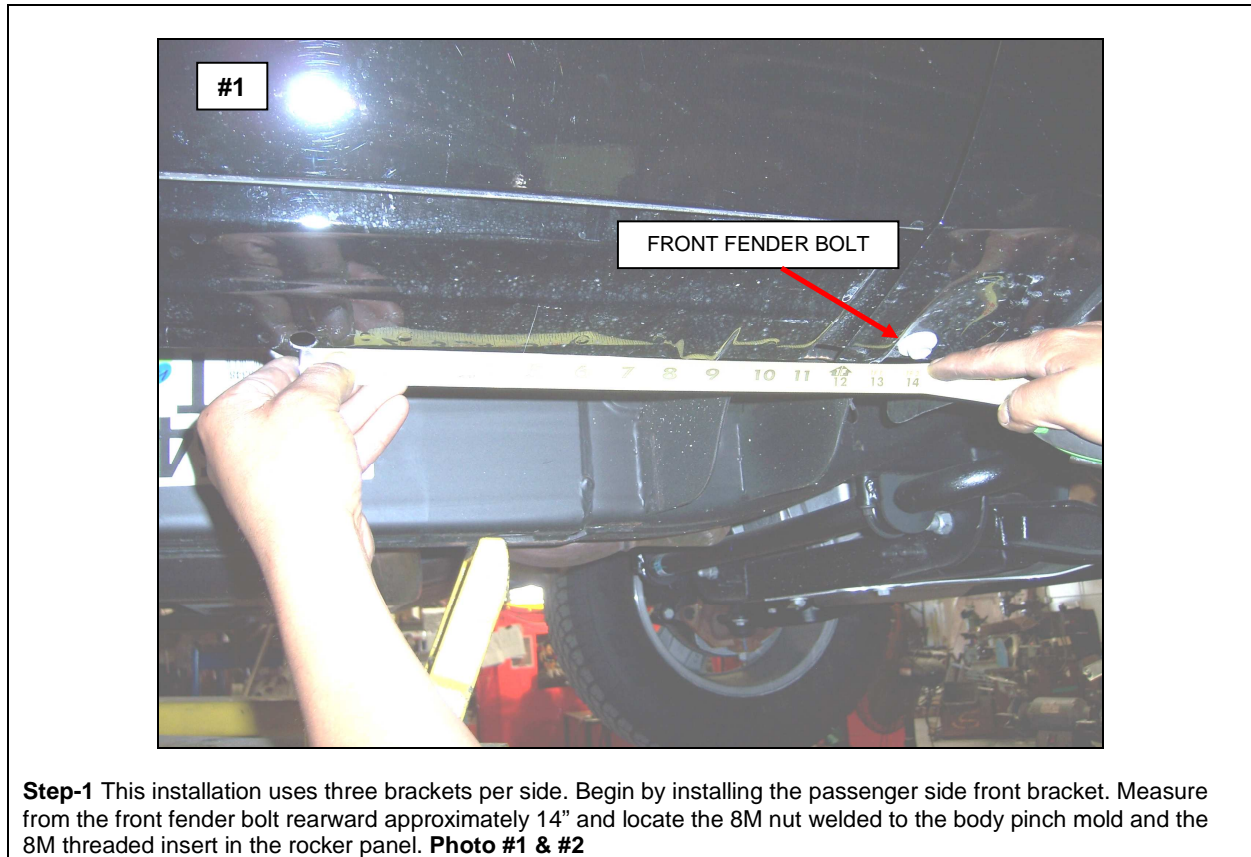


FODI7.003.1

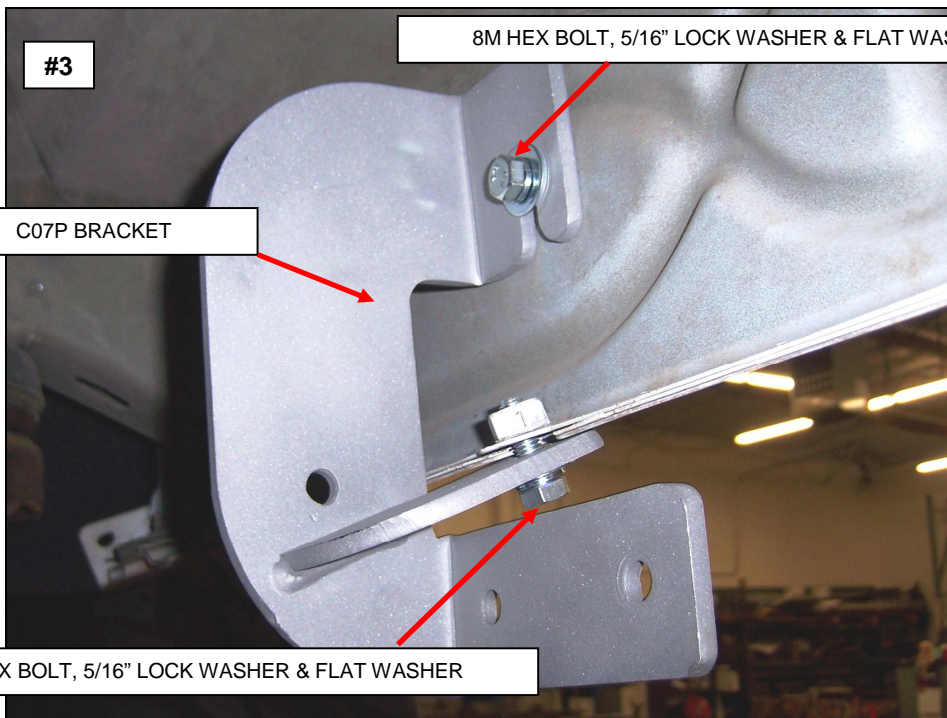
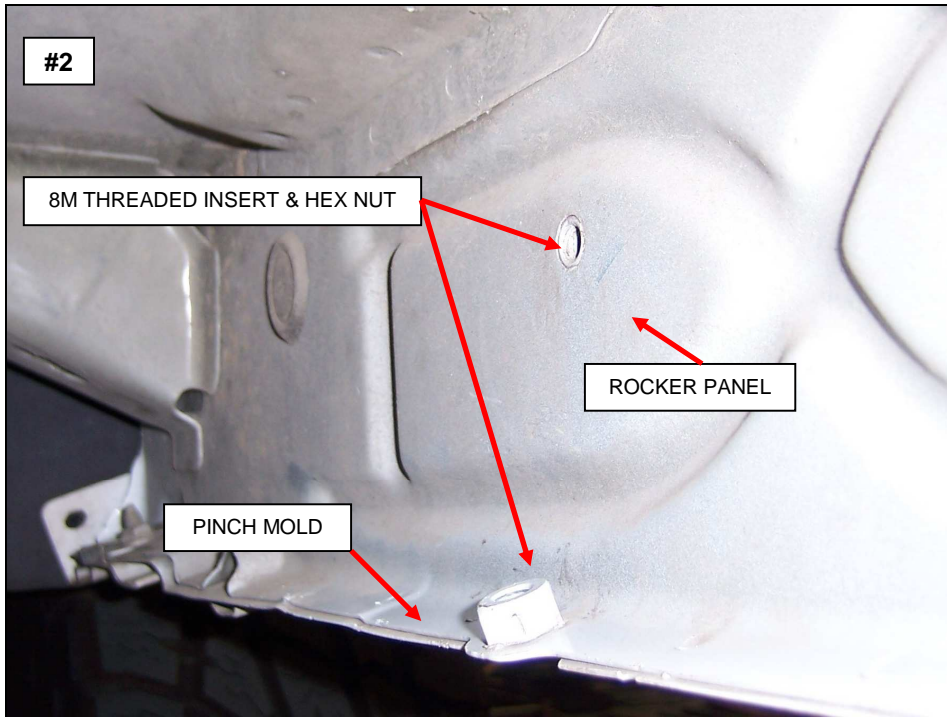


Step-2 Attach one of the C07P brackets to the rocker panel and pinch mold using (2) 8M hex bolts, (2) 5/16" lock washers and (2) 5/16" flat washers. Leave the bolts loose for final adjustment. **Photo #3**


Step-3 Measure from the front fender bolt reward approximately 58 7/8" for the center bracket and locate the hole in the body pinch mold and the plastic plug in the rocker panel. Remove the plastic plug from the rocker panel and install (1) 5/16" U-Nut in the rocker panel. **Photo #4 & #5**

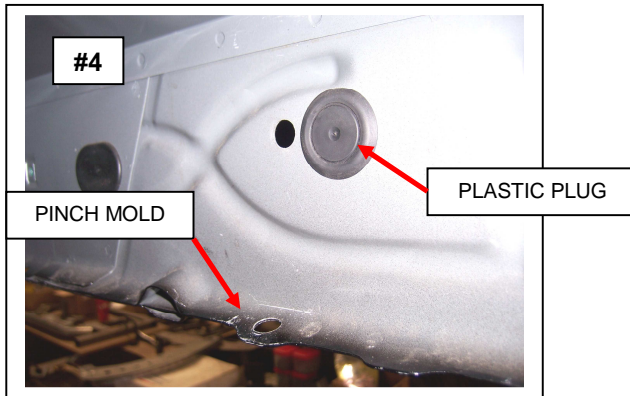


Step-4 Measure from the front fender bolt reward approximately 75 1/8" for the rear bracket and locate the hole in the body pinch mold and the plastic plug in the rocker panel. Remove the plastic plug from the rocker panel and install (1) 5/16" U-Nut in the rocker panel.

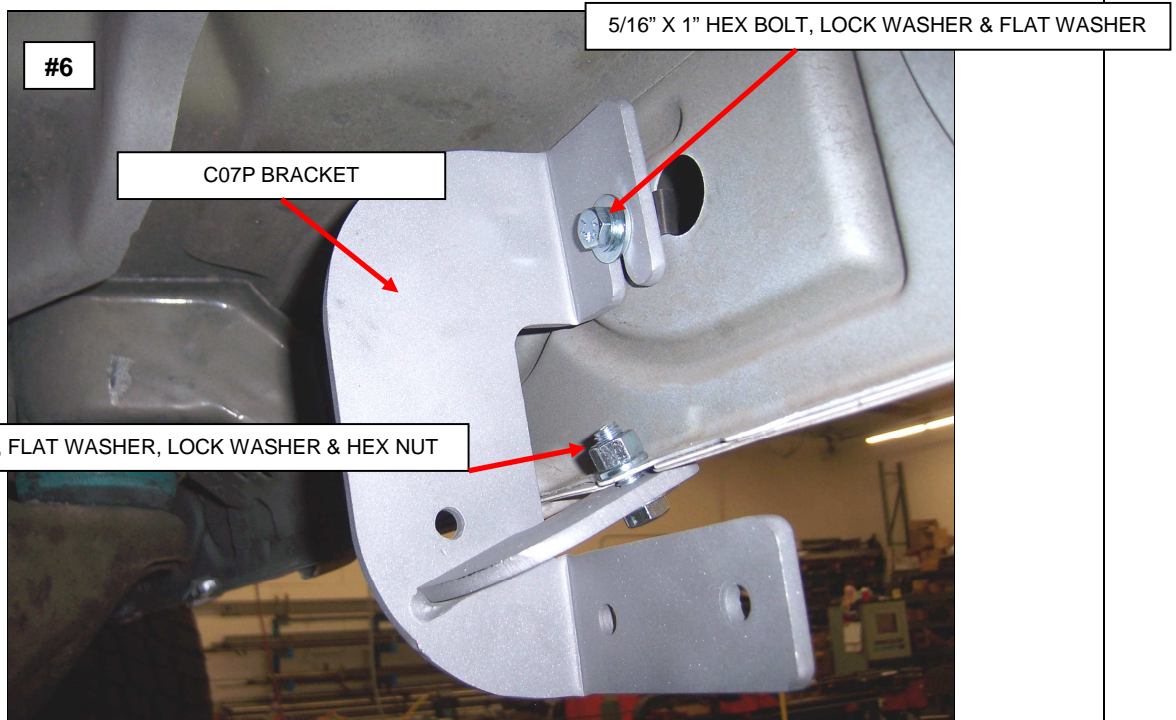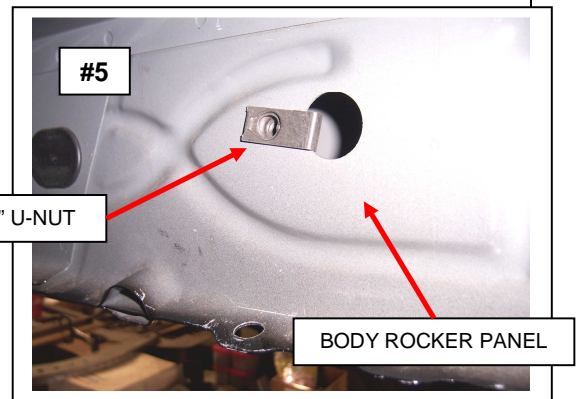

Step-5 Attach each bracket to the rocker panel using (1) 5/16" x 1" hex bolt, (1) 5/16" lock washer, (1) 5/16" flat washer and to the pinch mold using (1) 3/8" x 1 1/4" hex bolt, (1) 3/8" lock washer, (1) 3/8" flat washer and (1) 3/8" hex nut. Leave the nut and bolts loose for final adjustment. **Photo #6 & #7**

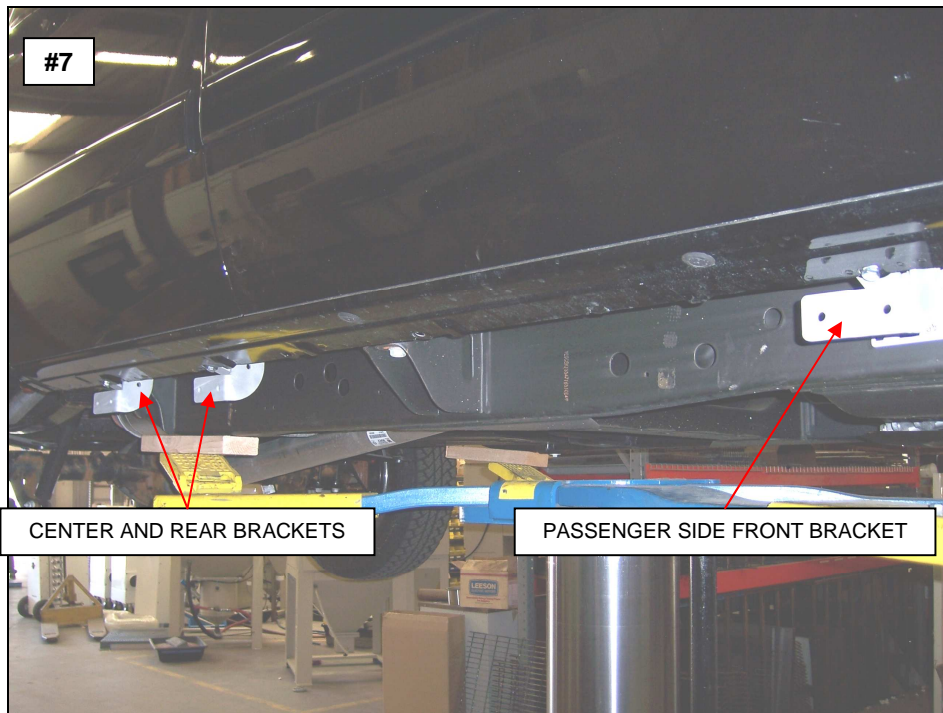

Step-6 Attach the passenger side step to each bracket using (2) 3/8" x 1 1/4" hex bolts, (2) 3/8" flat washers, (2) 3/8" lock washers and (2) 3/8" hex nuts. **Photo #8**

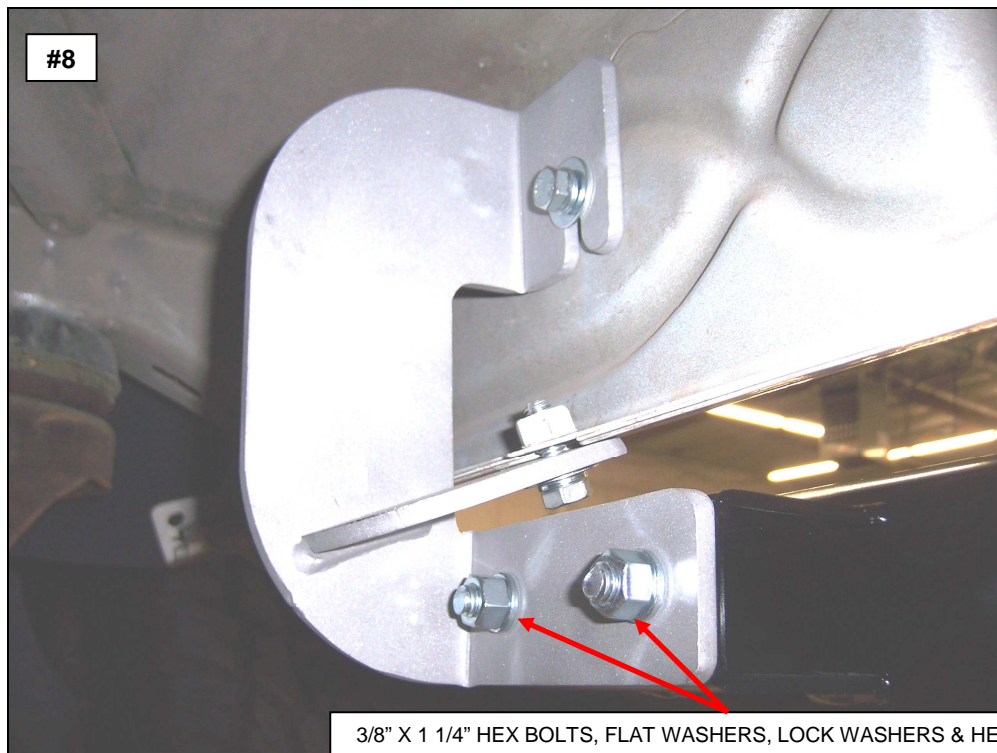

3/8" X 1 1/4" HEX BOLTS, FLAT WASHERS, LOCK WASHERS & HEX NUTS

Step-7 Align the side step with the vehicle and tighten all bracket and side step nuts and bolts. Repeat the above steps to install the driver side brackets and side step.

FODI7.003.I


FOR TECHNICAL OR WARRANTY INFORMATION CALL:
TOLL FREE (888)427-4466 FAX (714)672-0278
GO RHINO! Products® 591 W. Apollo St. Brea, CA 92821

SIDE BAR WHEEL TO WHEEL

ASSEMBLY INSTRUCTIONS

QTY	PARTS DESCRIPTION
2	PLASTIC PLUGS
2	3/8" X 3/4" SOCKET SET SCREWS
2	PLASTIC TRIM RINGS


STEP 1. BEGIN BY LAYING OUT THE DRIVER SIDE FRONT AND REAR SIDESTEP SECTIONS ON A PROTECTIVE SURFACE WITH THE STEP PAD SIDE DOWN.

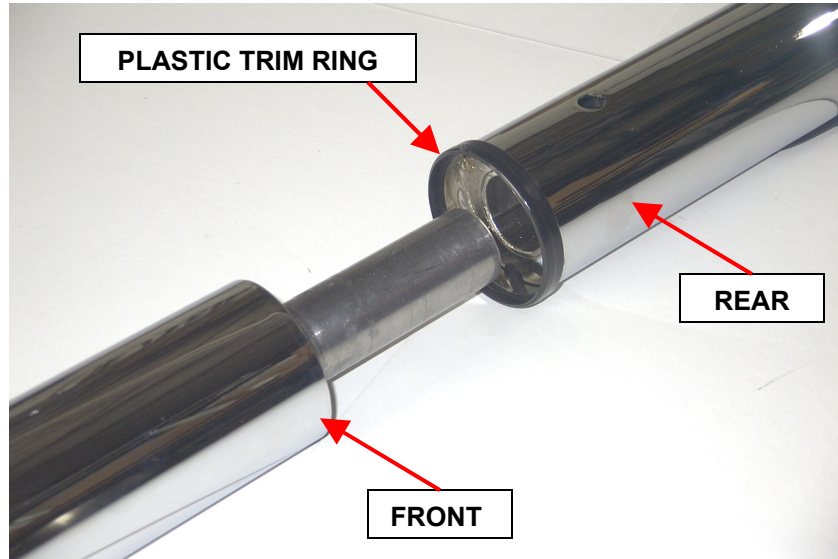

STEP 2. INSTALL THE PLASTIC TRIM RING ON THE REAR SECTION AND INSERT THE FRONT SECTION INTO THE REAR SECTION.

STEP 3. POSITION THE SIDESTEP SECTIONS AGAINST THE PLASTIC TRIM RING.

STEP 4. ALIGN THE FRONT AND REAR STEP HOOPS AND SECURE THE ASSEMBLY USING (1) SOCKET SET SCREW.

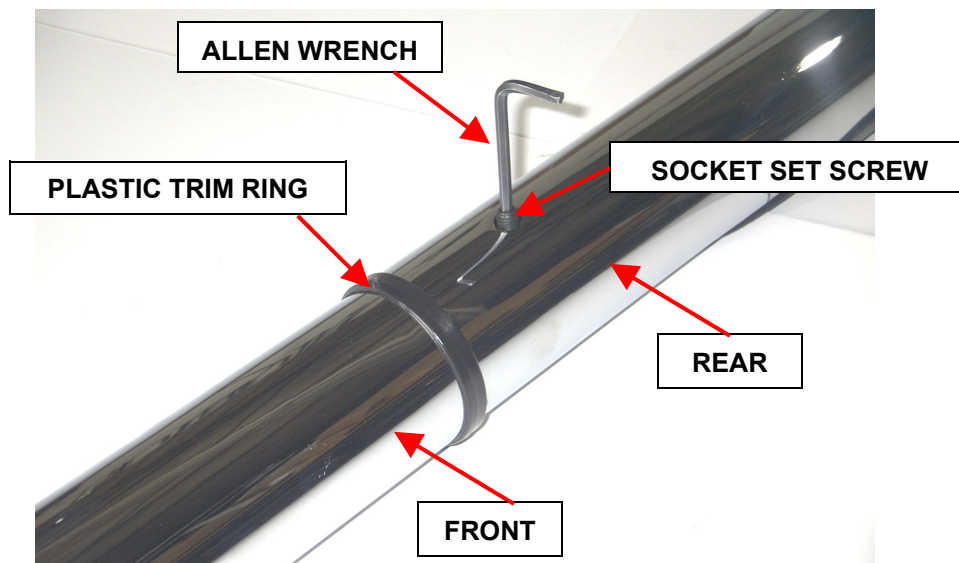

STEP 5. INSTALL THE PLASTIC PLUG TO CONSEAL THE SET SCREW.

REPEAT THE ABOVE STEPS TO ASSEMBLE THE PASSENGER SIDE.

FODI7.003.I