

INSTALLATION INSTRUCTIONS

DOMINATOR III Series SideSteps Part Number D36076 (B-PS)

2011 Chevrolet Silverado / GMC Sierra 2500HD, 3500HD Crew Cab P/U 2/4WD Short Bed (Diesel)

Do not attempt to install this product on any vehicle other than the one it is designed for and listed above!

Parts List

<u>QTY</u>	<u>Part Description</u>	<u>QTY</u>	<u>Part Description</u>
1	8mm x 25mm Hex Bolt	13	3/8" Hex Nut
10	5/16" U-Nut	1	C09120 Passenger Front Bracket
10	5/16" x 1" Hex Bolt	2	C0922 Passenger Center & Rear Bracket
11	5/16" Flat Washer	3	C0921 Driver Front, Center & Rear Bracket
11	5/16" Lock Washer	1	Vinyl Gasket
1	3/8" T-Bolt	1	375FP Passenger Side Step Front Section
12	3/8" x 1 1/4" Hex Bolt	1	375RP Passenger Side Step Rear Section
13	3/8" Lock Washer	1	375FD Driver Side Step Front Section
25	3/8" Flat Washer	1	375RD Driver Side Step Rear Section

Tool Required:



1/2", 9/16" & 13mm Socket
1/2", 9/16" & 13mm Wrench
3/16" Hex Key
Ratchet & Ratchet Extension

Approximate installation time: 45min



Installation

Read the installation instructions completely and verify that all of the parts listed are accounted for.


Step-1 This installation uses three mounting brackets per side. Begin by installing the passenger side front bracket. Measure from the front fender bolt rearward approximately 14", locate the hole in the body pinch mold and install (1) 5/16" U-Nut as shown. **Photo #1 & #2**

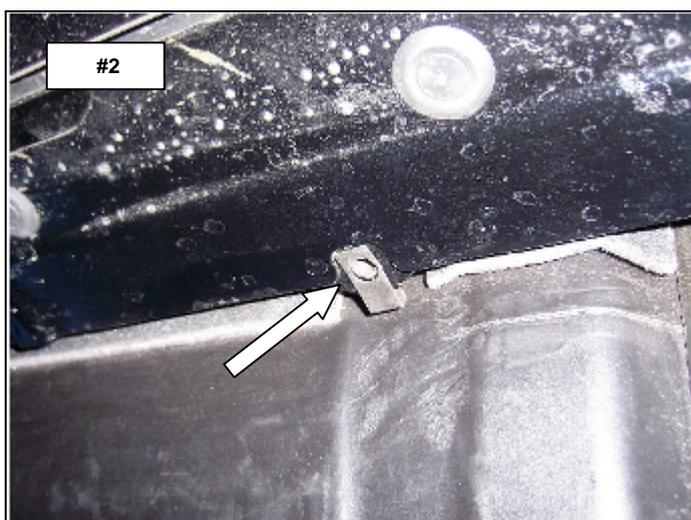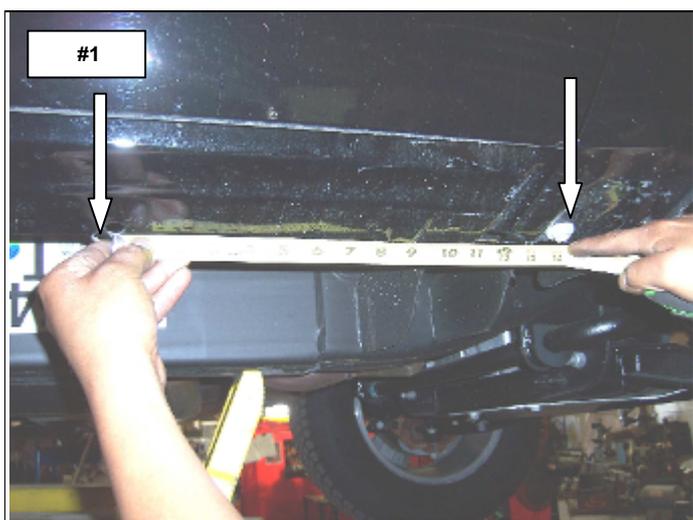



Step-2 Locate in front of the urea tank the plastic plug in the body rocker panel. Remove the plug, Install the vinyl gasket over the threads of the 3/8" T-Bolt and install T-Bolt in the rocker panel as shown. **Photo #3 & #4**

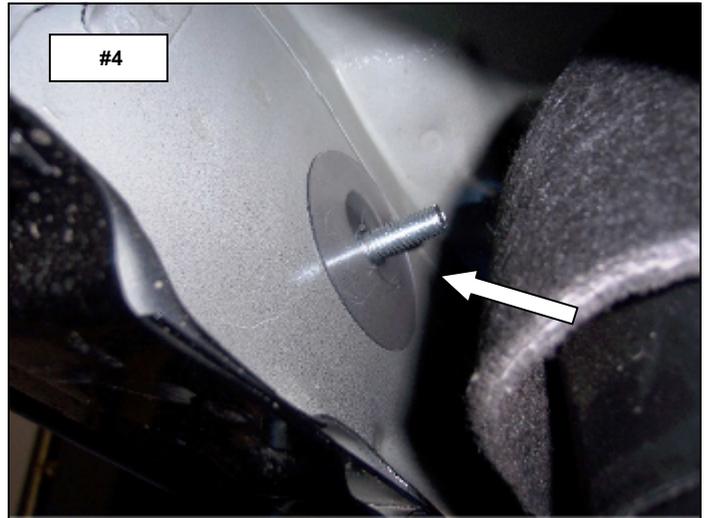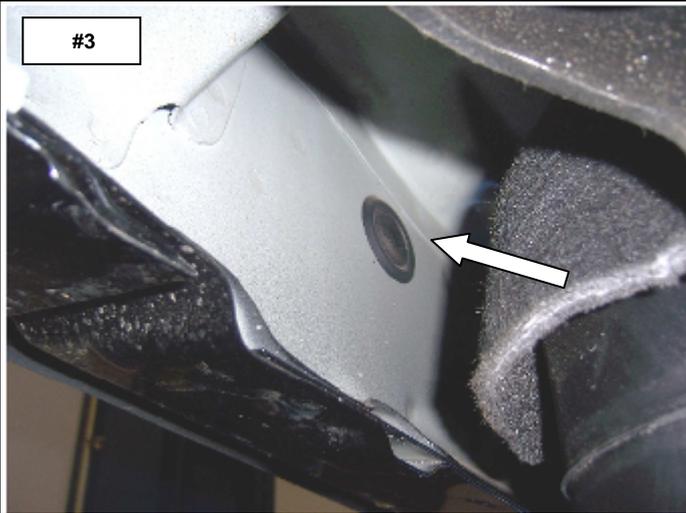

Step-3 From the front of the urea tank, position the front mounting bracket between the tank and the body pinch mold. Slide the bracket rearward and align the holes in the bracket with the T-Bolt and U-Nut. **Photo #5 & #6**

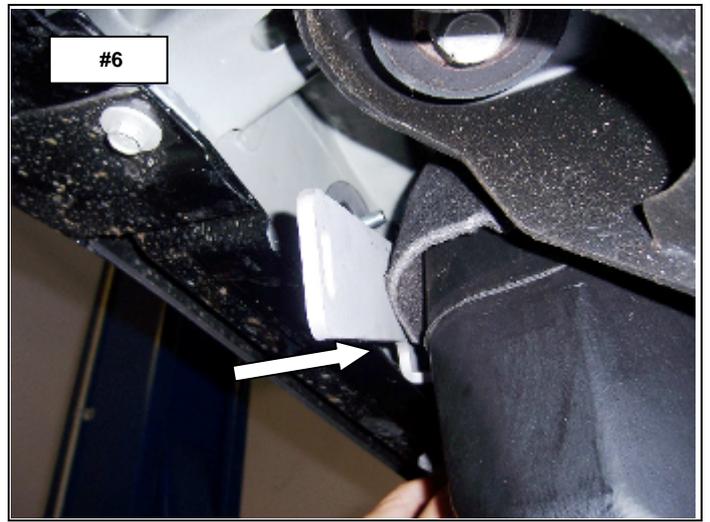



Step-4 Position the hole in the front of the bracket over the T-Bolt and install (1) 3/8" flat washer, (1) 3/8" lock washer and (1) 3/8" hex nut. Align the hole in the flange of the bracket with the U-Nut and install (1) 5/16" flat washer, (1) 5/16" lock washer and (1) 5/16" x 1" hex bolt. Leave the nut and bolt loose for final adjustment. **Photo #7 & #8**

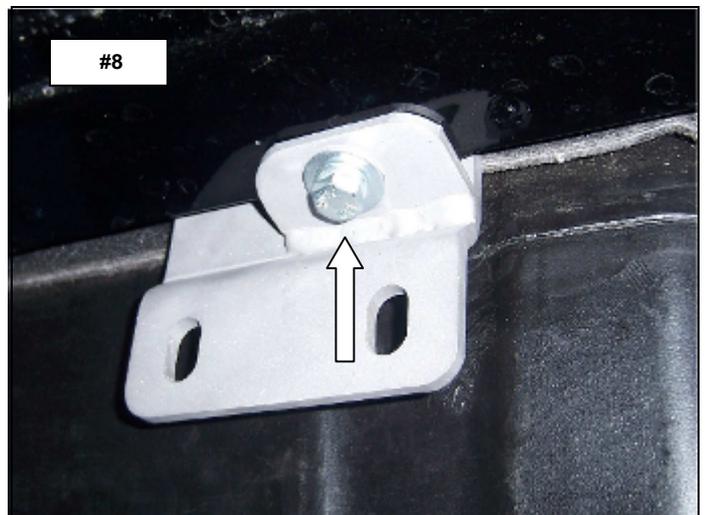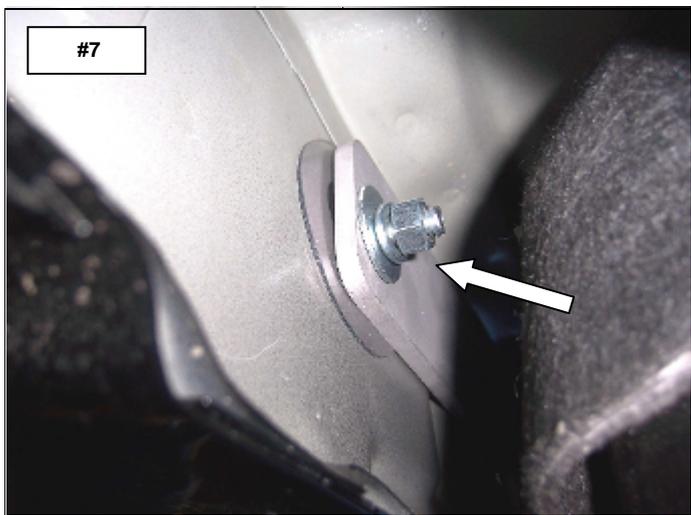

Step-5 Passenger side Center bracket installation.

Measure from the front fender bolt reward approximately 58 7/8" and locate the hole in the body pinch mold and the plastic plug in the rocker panel. Remove the plastic plug from the rocker panel and install 5/16" U-Nuts in the rocker panel and pinch mold. Attach one of the C0922 brackets to the rocker panel and pinch mold using the (2) 5/16" x 1" hex bolts, (2) 5/16" lock washers and (2) 5/16" flat washers. Leave the bolts loose for final adjustment.



Photo #9 & #10

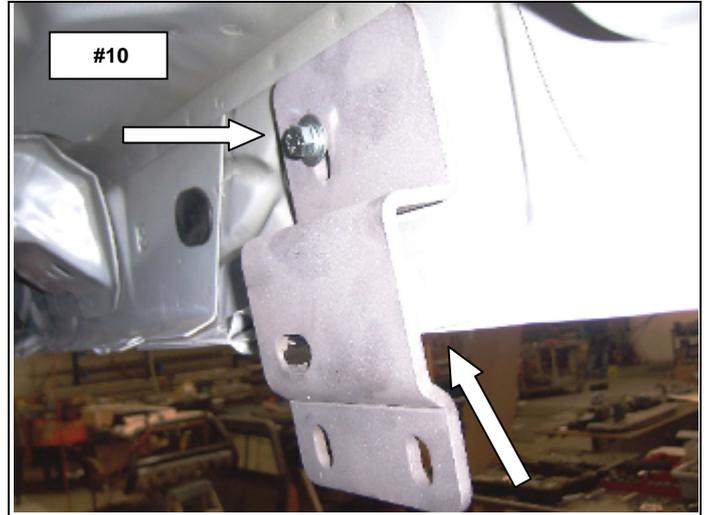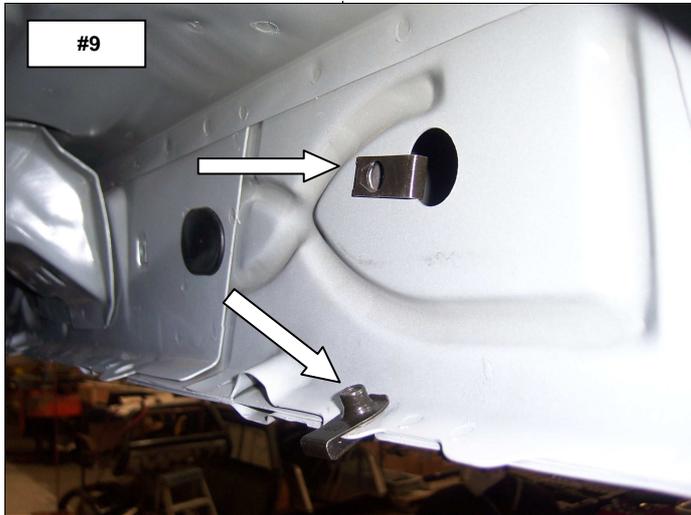

Step-6 Passenger side rear bracket installation.

Measure from the front fender bolt reward approximately 75 1/8" and repeat step 5 to install the remaining C0922 bracket.


Step-7 Attach the passenger side step assembly to the front bracket **Photo #11** and to the center and rear bracket **Photo#12** using (2) 3/8" x 1 1/4" hex bolts, (4) 3/8" flat washers, (2) 3/8" lock washers and (2) 3/8" hex nuts for each bracket.

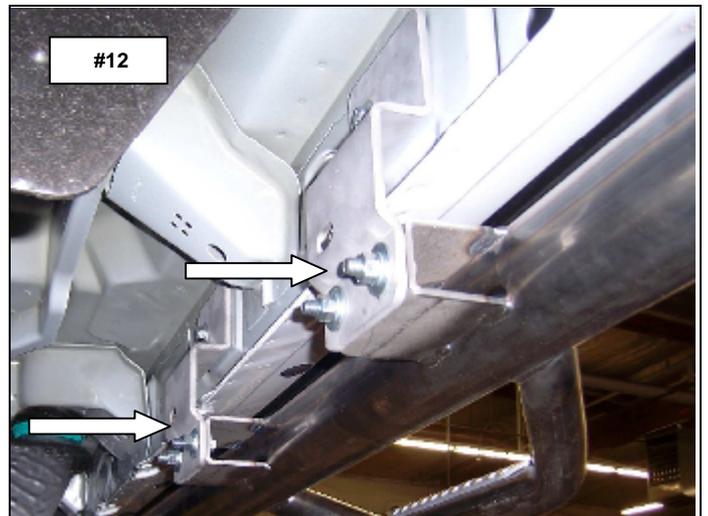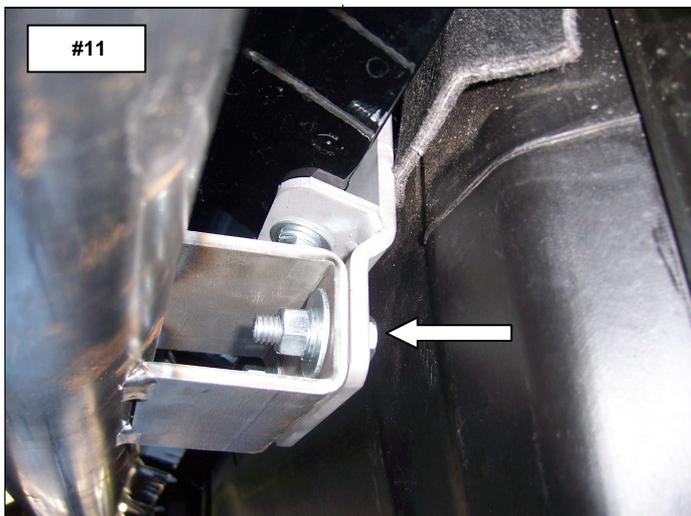

Step-8 Align the side step with the vehicle and tighten all nuts and bolts.

Step-9 Driver side front bracket installation.

Measure rearward from the front fender bolt approximately 14" and locate the hole in the body pinch mold and the 8mm threaded insert spot welded in the rocker panel. install a 5/16" U-Nut in the pinch mold and attach one of the C0921 brackets to the rocker panel using (1) 8mm x 25mm hex bolt, (1) 5/16" lock washer and (1) 5/16" flat washer and to the pinch mold using the (1) 5/16" x 1" hex bolt, (1) 5/16" lock washer and (1) 5/16" flat washer. Leave the bolts loose for final adjustment. **Photo #13 & #14**

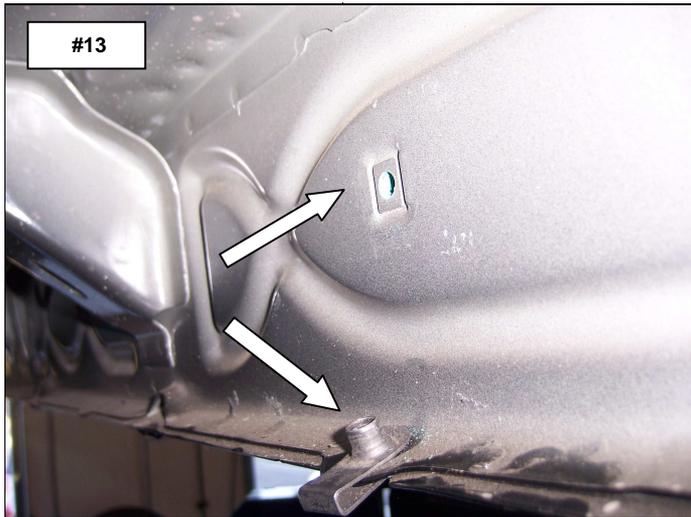

Step-10 Driver side center and rear brackets.

Repeat step 5, 6 & 7 to install the driver side center bracket, rear bracket and side step. Align the side step with the vehicle and tighten all nuts and bolts.

Remember to check and retighten all nuts and bolts periodically.




Please do not return this product to place of purchase.
If you have defective, missing or damaged parts or need assistance, please contact *Go Rhino Products* for fast, friendly customer service at: **1-800-731-0425** or email: **info@gorhino.com**

SIDE BAR WHEEL TO WHEEL

ASSEMBLY INSTRUCTIONS

<u>QTY</u>	<u>PARTS DESCRIPTION</u>
2	PLASTIC PLUGS
2	3/8" X 3/4" SOCKET SET SCREWS
2	PLASTIC TRIM RINGS


STEP 1. BEGIN BY LAYING OUT THE DRIVER SIDE FRONT AND REAR SIDESTEP SECTIONS ON A PROTECTIVE SURFACE WITH THE STEP PAD SIDE DOWN.

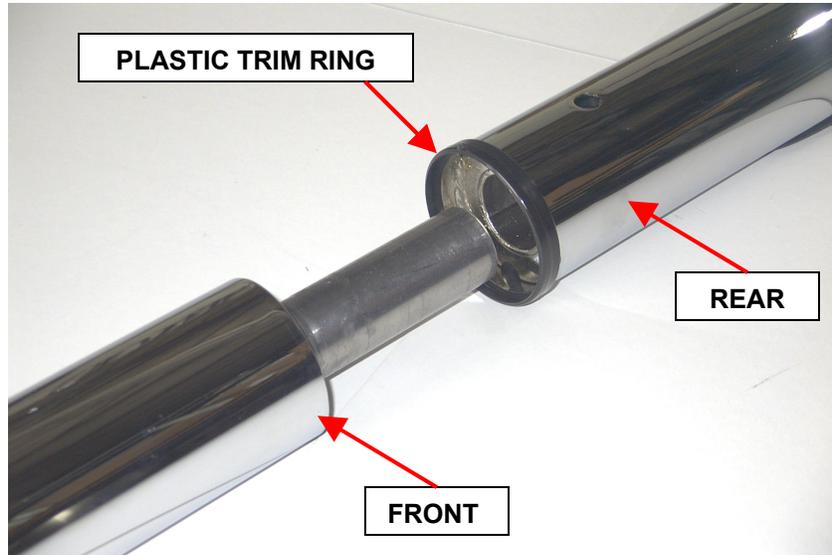

STEP 2. INSTALL THE PLASTIC TRIM RING ON THE REAR SECTION AND INSERT THE FRONT SECTION INTO THE REAR SECTION.

STEP 3. POSITION THE SIDESTEP SECTIONS AGAINST THE PLASTIC TRIM RING.

STEP 4. ALIGN THE FRONT AND REAR STEP HOOPS AND SECURE THE ASSEMBLY USING (1) SOCKET SET SCREW.

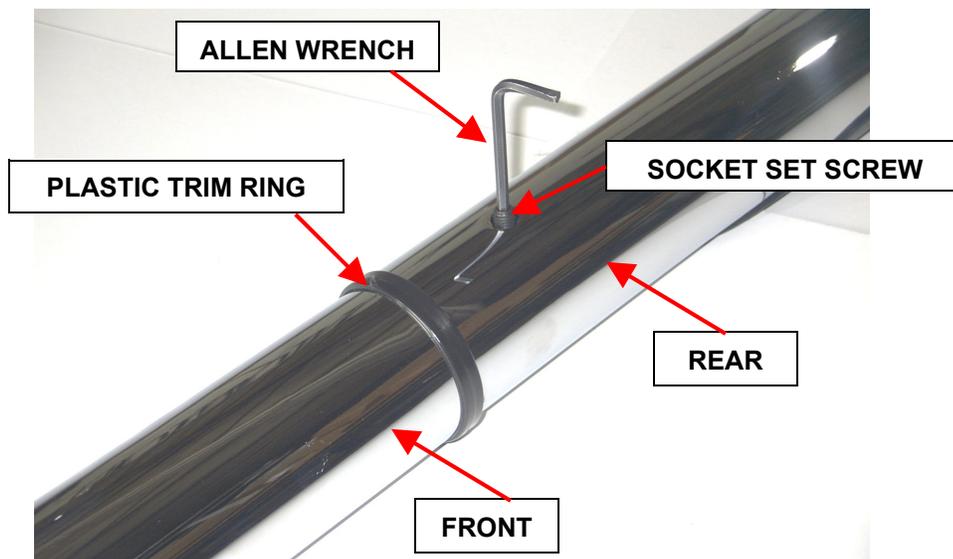

STEP 5. INSTALL THE PLASTIC PLUG TO CONSEAL THE SET SCREW.

REPEAT THE ABOVE STEPS TO ASSEMBLE THE PASSENGER SIDE.

FODI7.003.I