

INSTALLATION INSTRUCTIONS

DOMINATOR III SERIES SIDE STEPS PART NUMBER D360391 (B)
07-10 CHEVROLET SILVERADO / GMC SIERRA EXT CAB P/U 4DR 2/4WD


Do not attempt to install this product on any vehicle other than the one it is designed for and listed above!

PARTS LIST


<u>QTY</u>	<u>PARTS DESCRIPTION</u>	<u>QTY</u>	<u>PARTS DESCRIPTION</u>
6	5/16" U-NUTS	18	3/8" FLAT WASHERS
6	5/16" X 1" HEX BOLTS	3	C07D DRIVER MOUNTING BRACKETS
6	5/16" LOCK WASHERS	3	C07P PASSENGER MOUNTING BRACKETS
6	5/16" FLAT WASHERS	1	D360391D DRIVER SIDE STEP
18	3/8" x 1 1/4" HEX BOLTS	1	D360391P PASSENGER SIDE STEP
18	3/8" LOCK WASHERS		
18	3/8" HEX NUTS		

STEP-1 Read the instructions completely before you begin the installation.



If the vehicle is equipped with factory side steps, remove the side steps and fasteners.

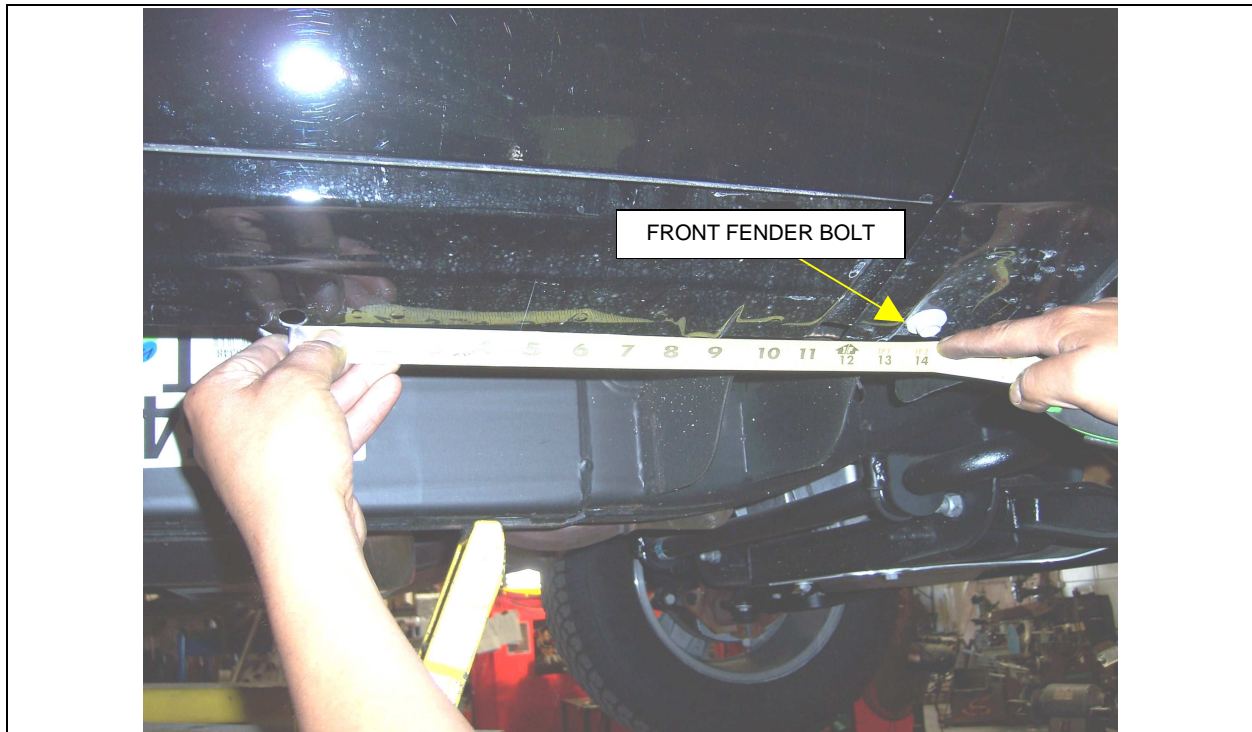


STEP-2 This installation uses three mounting brackets per side. Begin by installing the passenger side front mounting bracket. Measure rearward from the front fender bolt approximately 14" and locate the holes in the body pinch mold, rocker panel and the plastic plug in the rocker panel.

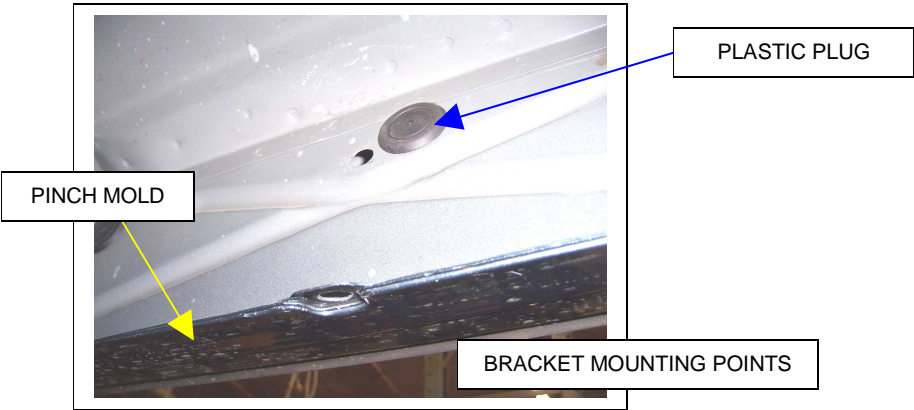


STEP-3 Remove the plastic plug from the rocker panel and install (1) 5/16" U-NUT as shown.

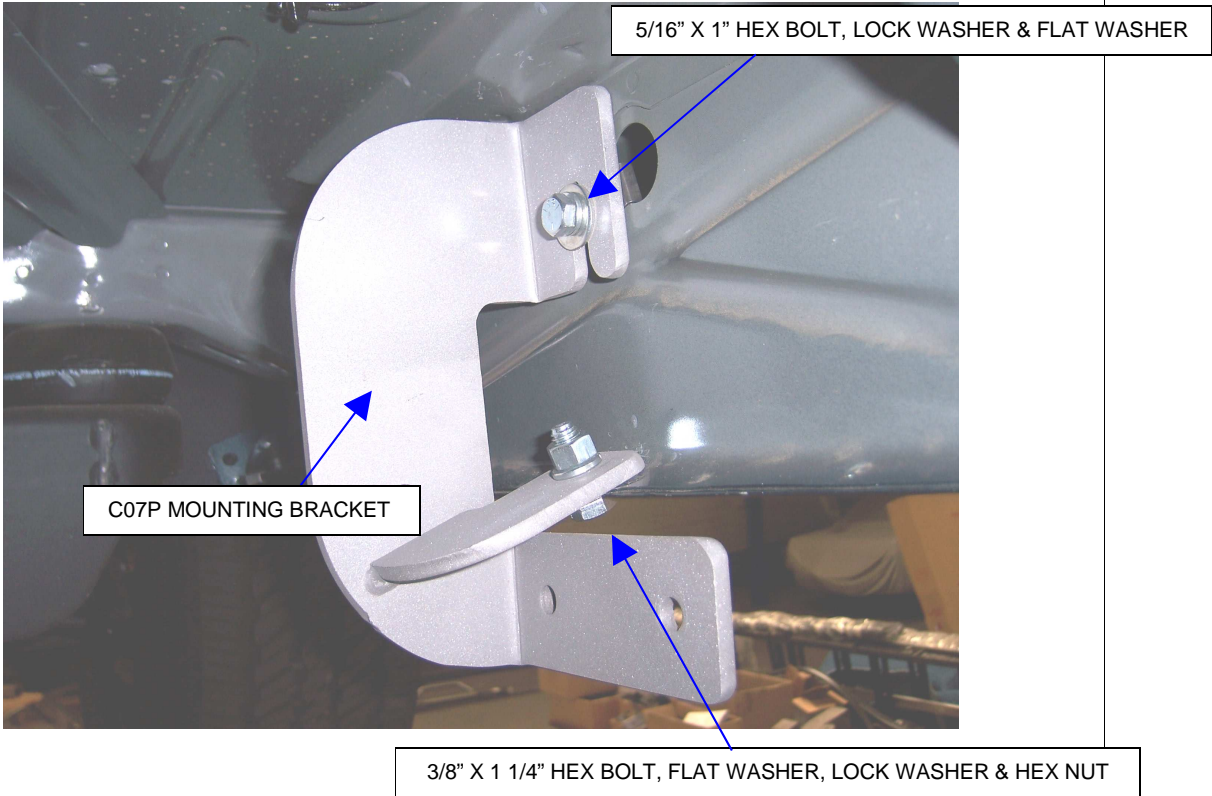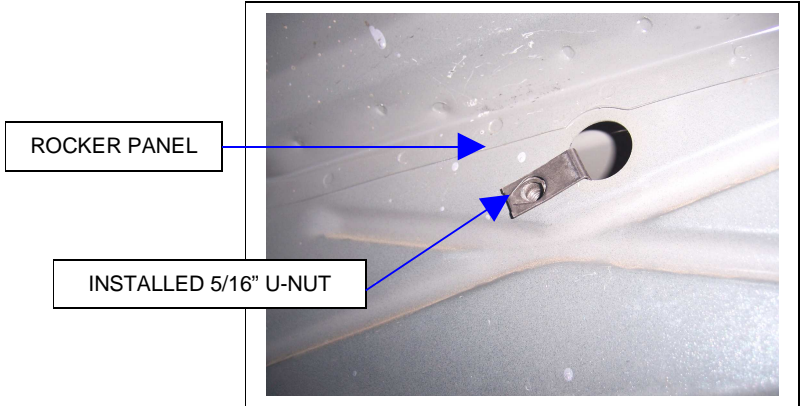

STEP-4 Loosely attach one of the C07P mounting brackets to the rocker panel and pinch mold using the 5/16" and 3/8" fasteners as shown.

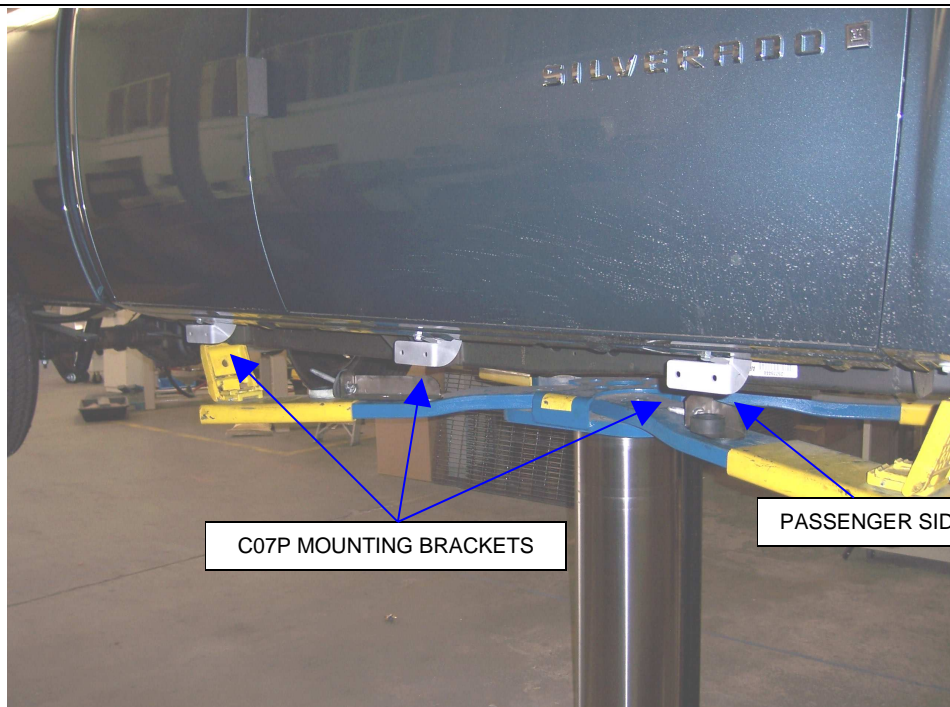

STEP-5 Locate the holes in the body for the center and rear mounting brackets. Measure rearward from the front fender bolt 37 3/4" for the center and 67" for the rear bracket. Repeat steps 3 & 4 to install the center and rear brackets.

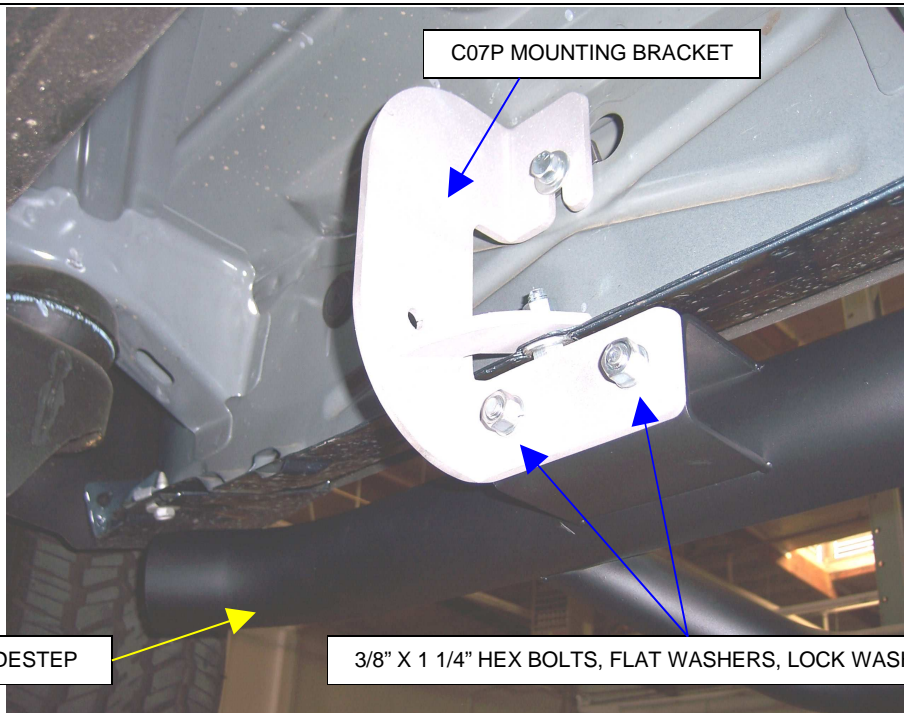

PASSENGER SIDESTEP

3/8" X 1 1/4" HEX BOLTS, FLAT WASHERS, LOCK WASHERS & HEX NUTS

STEP-6 Position the passenger sidestep up to the vehicle and loosely attach it to the mounting brackets using the 3/8" x 1 1/4" hex bolts, flat washers, lock washers and hex nuts.

STEP-7 Tighten all mounting bracket and sidestep nuts and bolts. Repeat the above steps to install the driver side mounting brackets and sidestep.

FOR TECHNICAL OR WARRANTY INFORMATION CALL:
TOLL FREE (888)427-4466 FAX (714)672-0278
GO RHINO! Products® 591 W. Apollo St. Brea, CA 92821