

# STAKE POCKET BED RAIL 1024

## Parts List:

### QTY

## STAKE POCKET AND UNIVERSAL BED RAIL INSTALLATIONS INSTRUCTIONS:

( 1 ) Bed Rail Set	( 2 ) Rubber gaskets
( 2 ) 3/8 X 2" Allen head bolts	( 2 ) 3/8 x 1 1/2" dented bolts
( 2 ) 3/8" Round gaskets	( 2 ) 3/8" Flat washer
( 2 ) Rectangular threaded plate	( 2 ) 3/8" Lock washer
( 2 ) Rhomboid threaded plate	( 2 ) 3/8" hex nut.


## Tools Required :

7/32" Allen Wrench                      (1) Driller                      7/16" Twist drill bit

## Installation Instructions:

- 1.- Read and understand instructions completely before beginning installation.
- 2.- Place the Bed Rail over the stake pocket .
- 3.- Attach the rail into the stake pocket using the allen head bolt and insert the threaded plate into the stake .  
pocket . When the threaded plate spins around it will lock itself inside the stake pocket.
- 4.- Insert dented bolts to the limit. Use a nut and wrench to tighten the dented section of the bolt into the threaded base.
- 5.- Place bed rails on truck bed in the desired position, use point head of dented bolt to mark the position of four 7/16" holes to drill
- 6.- Mount the bed rail using all provided hardware if needed.
- 7.- Remember to re-tighten all the bolts periodically .

## Assembly Diagram:

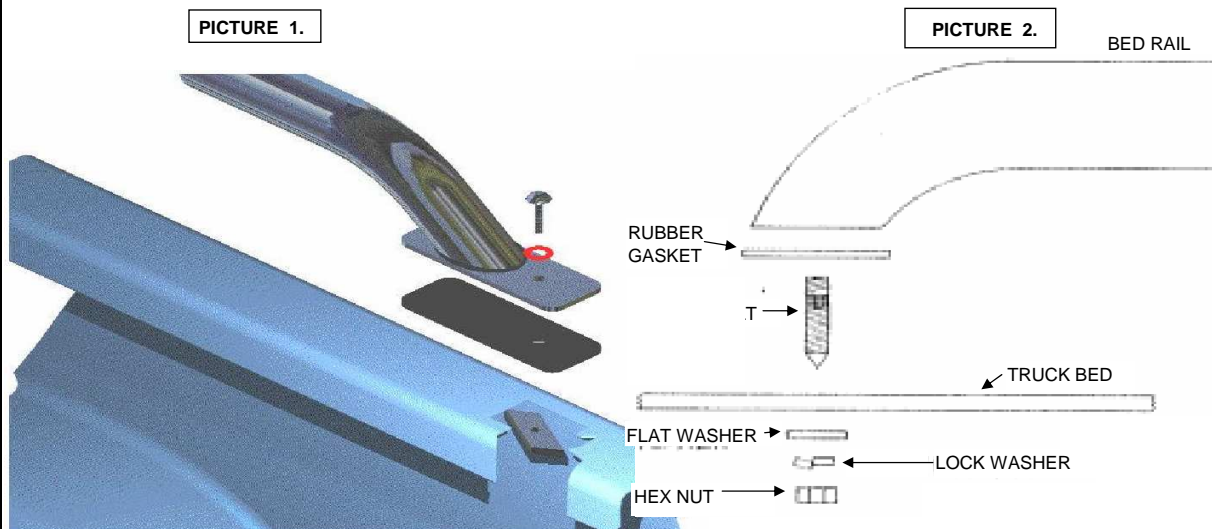

## Cleaning and care Instructions :

To protect the finish, do not use any abrasive automotive wax. The use any soap, polish, or wax that contains an abrasive is detrimental to the finish, as the compounds scratch the finish and cause corrosion.