



Suspension Enhancement

Ford F-750 [2007 ~ 2015] SumoSprings Part # SSF-108-47

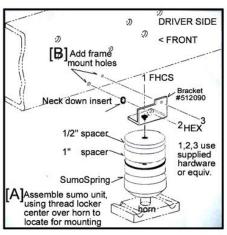





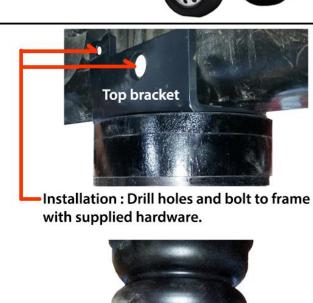



Centers above OE spring plate

Refer to SumoSprings application guide for part selection www.supersprings.com [Tech line #866-898-0720] SumoSprings enhance load carrying capability, handling & towing. Never exceed vehicle manufacturer's GVWR rating.

Installation Instructions

- 1) Park vehicle of level hard surface. Engage emergency brake. Place blocks in front and behind rear wheels to prevent rolling. Observe all safety precautions and wear safety glasses.
- 2) Raise front of vehicle allowing the axle to hang freely. Support the frame using safety jack stands.
- 3) Starting with the align jounce on top of OE spring plate with it inserted the bumpstop contact point.

4)

- 5) Repeat steps three through six on the passenger's side of the vehicle.
- 6) Jack up vehicle, remove safety jack stands.
- 7) Carefully lower vehicle to the hard surface. Remove the blocks in front and back of the rear wheels.
- 8) Release emergency brake.
- 9) Fill out warranty card and send to SuperSprings. The warranty card is on the reverse side of this page.

	<u>Tool List</u>		<u>Parts List</u>	
•	Floor Jack	1	SumoSprings	2
•	Jack Stands	2	Bracket #512089	1
•	15/16" wrench	2	Bracket #512090	1
•	½" wrench	2	Spacer-5" x 0.5"	2
•	Wheel Blocks	4	Spacer-5 x 1"	2
		•	1/2-13 hex bolt	2
		•	½-13 Nylock Nut	2
		•	7/16" washer	2
		•	5/16"-18 x 1" bolts	2
		•	5/16" washer	2
		•	5/16" lock-nuts	2
		•	3/8"-16 x 2.75" FHCS	2
		•	Bushing .75" down to .5"	2
		•	Lock-Tite sachet	2

Important Notice.

- 1) For easy installation please read instructions completely first and have all necessary tools available.
- 2) We recommend that this installation be done by a professional or persons with sound mechanical knowledge.
- 3) SumoSprings are designed to work with the original factory springs only. If they have been replaced with aftermarket springs then please consult with Supersprings International at 866-898-0720.
- 4) These instructions are meant as a guide for the installation of SumoSprings. SuperSprings International assumes no liability for the actual installation process. Installers should apply common automotive safety practices when raising, lowering and working on vehicles.
- 5) SumoSprings are designed to enhance the vehicles load carrying performance and road handling however it does not authorize (or recommend) loading beyond the manufacturer's GVWR specifications.
- 6) For technical support contact SuperSprings International at 866-898-0720.

To prevent damage to the vehicle and to ensure safety, do not exceed the maximum load recommended by the vehicles manufacturer (GVWR).